

## Audio System (with navigation system)

The button positions, shapes and screen may slightly vary depending on the type of the audio system.

### n Basic operation



- 1 Displays the audio control screen
- 2 Sound quality modes
- 3 Audio sources
  - AM·FM: AM·FM radio mode
  - SAT: Satellite Radio<sup>\*</sup> mode
  - DISC: DVD changer mode
  - AUX·USB: Auxiliary audio device/  
Bluetooth<sup>®</sup> audio player/USB  
memory/iPod<sup>®</sup>
- 4 Power/Volume

\*: The optional Lexus genuine satellite tuner and antenna allows you to receive and play XM<sup>®</sup> Satellite Radio broadcasts. (Subscription and installation of the antenna is required. For detailed information, see the navigation system Owner's Manual.)

## n Radio



- 1 Displays the audio control screen
- 2 Station presets
- 3 Radio tuner
- 4 Traffic information
- 5 Station select
- 6 Seek

### • Entering station presets

- 1 Select the desired station by using the tuner, seek or scan function.
- 2 Press and hold one of the preset switches (1-6) until you hear a beep, indicating that the station is set.

## n DVD player/CD player

### • Playing an audio CD



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Disc load
- 7 Eject
- 8 Track select/rewind/fast-forward

• Playing a CD with MP3/WMA files



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Folder select
- 7 File select
- 8 Disc load
- 9 Eject

• Playing a DVD



- 1 Displays the audio control screen
- 2 Disc select
- 3 DVD operation
- 4 Image display (full screen)
- 5 Disc load
- 6 Eject
- 7 Chapter select/rewind/fast-forward

- Loading a disc

- 1 Press the "LOAD" button.
- 2 When the indicator changes from flashing orange to green, insert a disc after the disc slot door opens.

- Loading multiple discs

- 1 Press and hold the "LOAD" button until you hear a beep.
- 2 When the indicator change from flashing orange to green, insert a disc after the disc slot door opens.
- 3 After inserting a disc, wait until the indicator changes from flashing orange to green, then insert the next disc after the disc slot door has opened.

Repeat steps 2 and 3 until you have inserted all discs.

To cancel the operation, press the "LOAD" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

## n Operating an iPod®



- 1 Displays the audio control screen
- 2 Menu
- 3 Pause/Playback
- 4 Repeat play
- 5 Random play
- 6 Track list
- 7 Track select
- 8 Track select/rewind/fast-forward

## n Audio remote control (steering switches)

---

It is possible to operate the audio system without removing your hands from the steering wheel.



- 1 Volume adjustment
- 2 RADIO mode: select station/tuner  
DVD mode: track/chapter/disc select  
CD mode: disc/track/file (MP3/WMA) select  
iPod® mode: song select
- 3 Power on/change mode: press  
Power off: press and hold

## n Audio door

---



Push the button to open or close.

## Portable Audio Device Adapter

This adapter can be used to connect a portable audio device and listen to it through the vehicle's speakers.

### n Display information

---



Pull up on lower tab.  
Lift to open.



Open the cover and connect a USB memory or iPod® using an iPod® cable.

## Audio System (without navigation system)

### n Basic operation



5VA10

- 1 Power ON/OFF, volume adjustment
- 2 Mode selectors
- 3 Changing sound quality modes
- 4 Adjusting sound quality

#### • Switching modes

**AM** Radio mode (AM)

**TAPE** Tape mode

**FM** Radio mode (FM)

**DISC** CD mode

## n Audio remote control (steering switches)

---

It is possible to operate the audio system without removing your hands from the steering wheel.



- 1 Volume adjustment
- 2 RADIO mode - select station / tuner  
TAPE mode - fast forward / rewind  
CD mode - select disc or track
- 3 Switch modes

## n Audio door


---



Push the button to open or close.



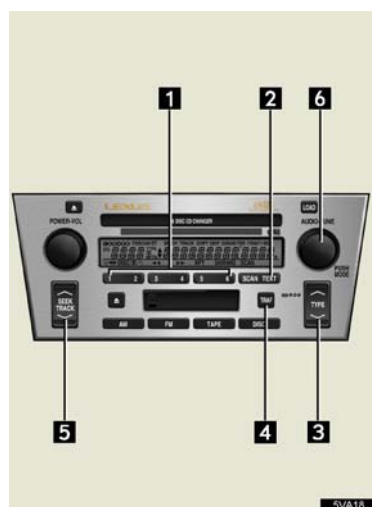

## n Radio mode




- 1 Enter or select preset stations
- 2 Receive radio text messages
- 3 Display selected programs
- 4 Receive traffic information
- 5 } Tuning
- 6 }

### • Entering station presets


- 1 Turn the power on
- 2 Switch to radio mode
- 3 Push  or turn  to select the desired station.
- 4 Hold down one of the buttons **1** through **6** until you hear a beep.

## n Tape mode

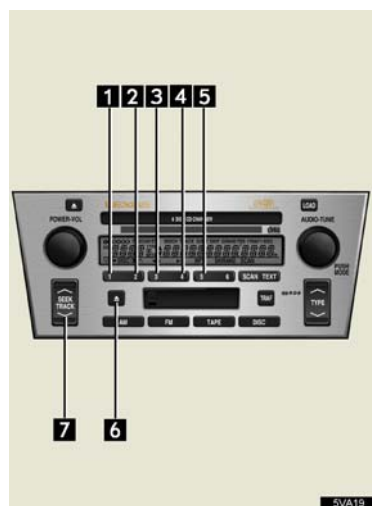

- 1 Reverse playback direction
- 2 DOLBY NR ON/OFF
- 3 Rewind
- 4 Fast forward
- 5 Repeat current track
- 6 Eject
- 7 Skip tracks

## n Disc mode (CD player)

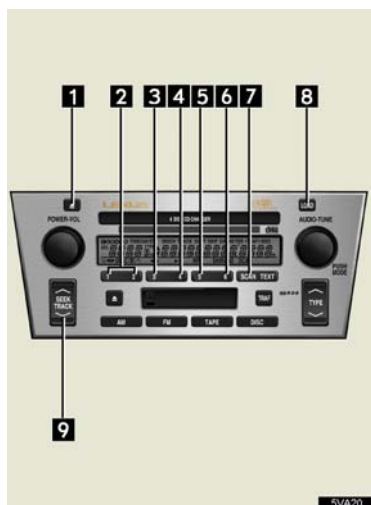

- 1 Eject disc
- 2 Select disc
- 3 Rewind
- 4 Fast forward
- 5 Repeat current track  
Repeat current disc (push and hold)
- 6 Current disc random playback  
All disc random playback  
(push and hold)
- 7 Play beginning of each track on current disc  
Play beginning of the first track of each disc  
(Push and hold)
- 8 Load disc
- 9 Select track

### • Loading a single CD

- 1 Press the **LOAD** button.  
“WAIT” appears on the display.
- 2 When the “WAIT” display changes to “LOAD”, insert the disc.

### • Loading multiple CDs

- 1 Hold down **LOAD** until you hear a beep.  
“WAIT” appears on the display.
- 2 When the “WAIT” display changes to “LOAD”, insert one disc.
- 3 Once the disc is inserted, “WAIT” appears again on the display.
- 4 Repeat steps 2 and 3.